


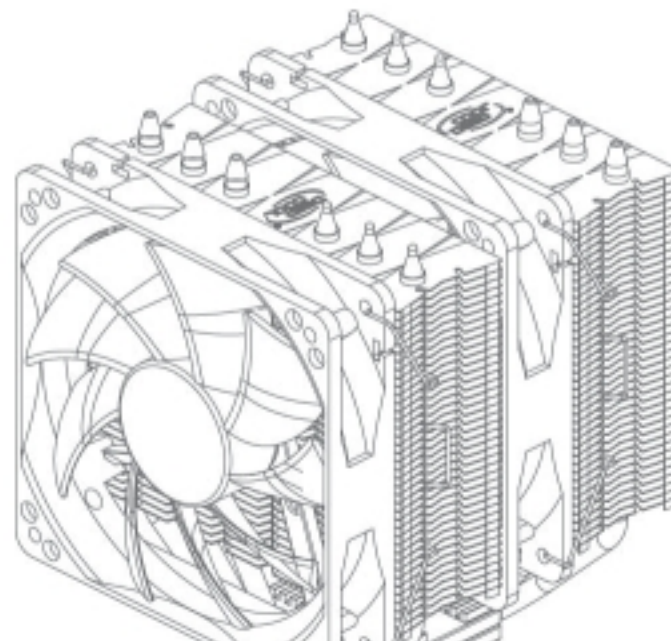

INSTALLATION GUIDE

This installation guide is applicable for NEPTWIN Series



NEPTWIN

PRODUCT SCHEMATIC DRAWING

1 Nut	4 pcs	2 Insulation Pillar	4 pcs	3 Screw Bolt	4 pcs	4 Mounting Bracket(Intel)	2 pcs	5 De-Vibration Buckle	4 pcs
6 Retention Plate	1 pc	7 Back Plate	1 pc	8 Mounting Bracket(AMD)	2 pcs	9 Insulating Washer (For LGA775 only)	1 pc	10 Double-screw Bolt (For LGA20XX only)	4 pcs
11 Thermal Grease	1 pc	12 Heatsink set	1 pc	13 Double-screw Bolt (For AM4 only)	4 pcs				

INTEL

LGA1366
LGA1156
LGA1155
LGA1151
LGA1150
LGA775

INTEL

LGA20XX

AMD

AM4
AM3+
AM3
AM2+
AM2
FM2+
FM2
FM1

AMD

AM4


INTEL

LGA20XX



安装说明书

此说明书适用于九州风神大霜塔系列。

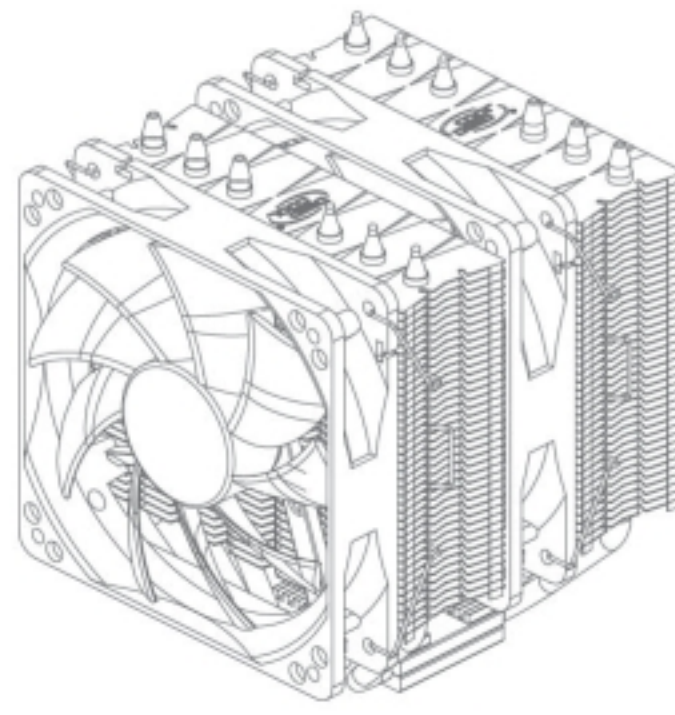

大霜塔

产品示意图

1 螺母	4 个	2 绝缘柱	4 个	3 螺柱	4 个	4 Intel转接架	2 个	5 减震扣	4 个
6 扣具	1 个	7 背板	1 个	8 AMD转接架	2 个	9 绝缘垫(LGA775专用)	1 个	10 双头螺栓(LGA20XX专用)	4 个
11 导热膏	1 个	12 散热器主体	1 个	13 双头螺栓(AM4专用)	4 个				

INTEL

LGA1366
LGA1156
LGA1155
LGA1151
LGA1150
LGA775

INTEL

LGA20XX

AMD

AM4
AM3+
AM3
AM2+
AM2
FM2+
FM2
FM1

AMD

AM4

INTEL

LGA20XX

Beijing Deepcool Industries Co., Ltd.
All rights reserved.
Devices not included

www.deepcool.com

九州风神公司01077000000
地址：北京市昌平区回龙观镇龙泽园9号10号楼
中国深圳

www.deepcool.com