



XS WIRELESS 1

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavalier Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C11	XSW 1-908	XSW 1-ME2	XSW 1-ME3
XS WIRELESS 1						
EM-XSW 1 	•	•	•	•	•	•
NT 12-5CW 	•	•	•	•	•	•
SKM 825-XSW 	•	•	•	•	•	•
MZQ 1 	•	•	•	•	•	•
SKM 835-XSW 	•	•	•	•	•	•
SK-XSW 	•	•	•	•	•	•
e 908T 	•	•	•	•	•	•
ME 2-2 	•	•	•	•	•	•
ME 3-II 	•	•	•	•	•	•
CI 1-N 	•	•	•	•	•	•
2 x AA LR6 1.5 V 	•	•	•	•	•	•

Battery

- Slide the battery cover open.
- Insert the battery with the correct polarity.
- Slide the battery cover closed.

Low Battery

The LCD display shows the following information:

- Bank: 1
- Ch: 1
- 925.300 MHz
- Battery level indicator (0-100%)

Approximate battery life:

- ~ 10 h (Full)
- ~ 7 h (Low)
- ~ 3 h (Low Batt)

Setup

Connect the receiver to the microphone using either an XLR-3 cable or a 6.3 mm cable.

Connect the receiver to different microphone types:

- ME 2-2 (Dynamic)
- e 908T (Dynamic)
- ME 3-II (Dynamic)
- CI 1-N (Dynamic)

On/off

Power on/off instructions:

- Receiver: Press the power button for 1s on, 3s off.
- Microphone: Press the power button for 1s on, 3s off.

Display

Display icons: Sensivity, Sync, Low battery.

Bank 1...8, Channel 0...9

Volume

Volume control: 0...9. Use the volume knob on the receiver or microphone.

Mute

Mute control: Audio on (green), Audio off (red). Use the mute button on the receiver or microphone.

Sennheiser electronic GmbH & Co. KG

